

******* 西铁城 MIYOTA 1L40 1L45机心配件列表 *******

原装配件，日本制造 由MIYOTA表心技术服务中心竭诚为您提供！

<u>PART NAME</u>	<u>中文名称</u>	<u>1L40</u>	<u>1L45</u>
BATTERY	电池	280-340	←
BATTERY CONNECTOR SPRING	电池压簧(正极)	231-368	←
BATTERY INSULATOR	电极绝缘片	230-220	←
CANNON PINION WITH DRIVING WHEEL	分轮	028-306	←
CLUTCH WHEEL	离合轮	064-790	←
COIL UNIT	线圈	246-181	←
DIAL WASHER	时轮簧	078-040	←
ELECTRONIC CIRCUIT UNIT	电路板	279-A450	←
FIFTH WHEEL AND PINION	五轮	084-750	←
FOURTH WHEEL AND PINION	四轮	023-328	←
SECOND WHEEL	秒轮	025-107	←
FRICTION SPRING FOR SECOND WHEEL	秒轮簧	903-106	←
HOUR WHEEL	时轮	075-467	←
INTERMEDIATE CHRONOGRAPH WHEEL (1)	计时快跳轮(1)	087-195	←
INTERMEDIATE CHRONOGRAPH WHEEL (2)	计时快跳轮(2)		087-196
LOWER FIFTH PINION		020-070	←
MINUTE WHEEL AND PINION	跨轮	072-126	←
ROTOR	转子	285-175	←
SCREW	螺丝	923-107	←
SCREW(2)	螺丝(2)	923-112	←
SCREW FOR DIAL GUARD(3)	日历盖螺丝	922-940	←
SETTING LEVER	压制杆	067-194	←
SETTING LEVER SPRING	柄轴压片	077-136	←
SETTING STEM	柄轴	065-477	←
SETTING WHEEL	拨针轮	076-640	←
SPACER FOR SETTING STEM	中间压板	212-239	←
STATOR	线圈固定板	190-152	←
THIRD WHEEL AND PINION	三轮(过轮)	017-149	←
TRAIN WHEEL BRIDGE	上夹板	701-E20	←
YOKE	离合杆	071-136	←

MIYOTA表心技术服务中心

地址：西安市高新六路43号绿港花园2-3-2301#

电话：029-81873950

<http://www.miyota-sc.com>

E-mail: miyota-sc@miyota-sc.com