

**\*\*\*\*\* 西铁城 MIYOTA FS00/01 FS10/11 FS20/21机心配件列表 \*\*\*\*\***

**原装配件, 日本制造 由MIYOTA表心技术服务中心竭诚为您提供!**

<b>PART NAME</b>	<b>中文名称</b>	<b>FS00/01</b>	<b>FS10/11</b>	<b>FS20/21</b>
ANTI MAGNETIC PLATE	防磁板	186-920	186-920	186-920
BATTERY	电池	280-390	280-390	280-390
BATTERY CONNECTOR SPRING	电池负极片	231-381	231-381	231-381
CALENDAR CORRECTOR LEVER	日历修正杆	116-121	116-126	116-126
CALENDAR CORRECTOR WHEEL	日历修正轮	213-380	213-540	213-540
CALENDAR PLATE	日历托圈		714-051	714-051
CANNON PINION WITH DRIVING WHEEL	分轮	028-337	028-345	028-345
CENTER WHEEL COCK	中心轮夹板	711-202	711-202	711-202
CHRONOGRAPH COIL UNIT 1	计时线圈 1	246-207	246-207	246-207
CLUTCH WHEEL	离合轮	064-670	064-670	064-670
COIL UNIT	线圈	246-207	246-207	246-207
DATE DIAL	日历盘	108-F40	108-F40	108-F40
DATE DIAL DRIVING WHEEL	日历推动轮	103-993	103-993	103-993
DATE DIAL GUARD (1)	日历盘压片1	293-126	293-129	293-129
DATE DIAL GUARD (2)	日历盘压片2	713-139	713-139	713-139
DATE JUMPER	日历盘限位簧	109-630	109-730	109-730
ELECTRIC CIRCUIT UNIT	电路板	279-E83	279-E83	279-E83
FIFTH WHEEL AND PINION	五轮	084-900	084-900	084-900
FLY-BACK LEVER	归位杆	260-117	260-117	260-117
FLY-BACK WHEEL	归位轮	100-690	100-700	100-700
FORTH WHEEL AND PINION	秒轮	023-376	023-376	023-376
HOUR WHEEL	时轮	075-542	075-556	075-556
INTERMEDIATE CHRONOGRAPH WHEEL	计时快跳轮	087-138	087-138	087-138
INTERMEDIATE DATE CORRECTING WHEEL	日历修正过轮	087-620	087-620	087-620
INTERMEDIATE DATE CORRECTING WHEEL(1)	日历修正过轮2	087-217	087-217	087-217
INTERMEDIATE DATE CORRECTING WHEEL(2)(3)	日历修正过轮3	087-235	087-235	087-235
INTERMEDIATE HOUR-RECORDING WHEEL 1	计小时快跳轮 (1)	087-226	087-226	087-226
INTERMEDIATE HOUR-RECORDING WHEEL 2	计小时快跳轮 (2)	087-227	087-227	087-227
INTERMEDIATE HOUR-RECORDING WHEEL 3	计小时快跳轮 (3)	087-228	087-228	087-228
INTERMEDIATE MINUTE WHEEL	分钟快跳轮	087-229	087-234	087-234
INTERMEDIATE MINUTE-RECORDING WHEEL	计分钟快跳轮	087-138	087-138	087-138
INTERMEDIATE SECOND-RECORDING WHEEL	计秒快跳轮	087-231	087-231	087-231
LEVER STOPPER	制停杆	117-290	117-290	117-290
MINUTE RECORDING WHEEL	计分钟轮	291-100	291-110	291-110
MINUTE WHEEL AND PINION	跨轮	072-132	072-132	072-132
PUSH BUTTON SPACER (FOR FS01/FS11/FS21)	柄轴簧片	282-960	282-104	282-105
ROTOR	转子	285-232	285-232	285-232
ROTOR FOR SECOND CHRONOGRAPH	计时转子 (1)	285-233	285-233	285-233
SCREW FOR CENTER WHEEL COCK (X3)	中心轮夹板螺丝(X3)	923-980	923-980	923-980
SCREW FOR CHRONOGRAPH GURD 1	计时压板螺丝1	929-490	929-490	929-490
SCREW FOR CHRONOGRAPH GURD 2	计时压板螺丝2	930-650	930-650	930-650
SCREW FOR CHRONOGRAPH GURD 3	计时压板螺丝3	929-490	929-490	929-490
SCREW FOR DATE DIAL GUARD (X3)	日历盖板螺丝(X3)	929-480	929-640	929-640

MIYOTA表心技术服务中心

地址: 西安市高新六路43号绿港花园2-3-2301#

电话: 029-81873950

网址: www.miyota-sc.com

E-mail: miyota-sc@miyota-sc.com

原装配件, 日本制造 由MIYOTA表心技术服务中心竭诚为您提供!

接上页

<b>PART NAME</b>	<b>中文名称</b>	<b>FS00/01</b>	<b>FS10/11</b>	<b>FS20/21</b>
SCREW FOR ELECTRIC CIRCUIT (X2)	电路板螺丝(X2)	922-166	922-166	922-166
SCREW FOR TRAIN WHEEL BRIDGE 1	主夹板螺丝1	923-980	923-980	923-980
SCREW FOR TRAIN WHEEL BRIDGE 2	主夹板螺丝2	934-470	934-470	934-470
SECOND CHRONOGRAPH WHEEL	计秒轮	251-230	251-240	251-240
SECOND WHEEL	秒轮	025-118	025-119	025-119
SETTING LEVER	压制杆	067-162	067-162	067-162
SETTING STEM	柄轴	065-549	065-549	065-549
SETTING WHEEL	拨针轮	076-680	076-680	076-680
SPACER FOR SETTING STEM	柄轴簧片	212-301	212-309	212-309
STATOR	定子	190-203	190-203	190-203
STATOR FOR CHRONOGRAPH 1	计时定子(1)	190-205	190-205	190-205
STOP LEVER	停止杆	204-550	204-570	240-570
STOP SPRING	停止簧	903-228	903-228	903-228
SUPPORTER FOR PLATE COMPLETE	机芯托板	226-508	226-508	226-508
SUPPORTOR FOR CHRONOGRAPH PLATE	计时支撑板	720-568	720-593	720-595
THIRD WHEEL AND PINION	三轮(过轮)	017-171	017-171	017-171
TRAIN WHEEL BRIDGE	上夹板	701-F39	701-F39	701-F39
YOKE	离合杆	071-144	071-144	071-144
LONGER SETTING STEM(24.00MM)	长柄轴	065-557	065-557	065-557

MIYOTA表心技术服务中心

地址: 西安市高新六路43号绿港花园2-3-2301#

电话: 029-81873950

网址: www.miyota-sc.com

E-mail: miyota-sc@miyota-sc.com